















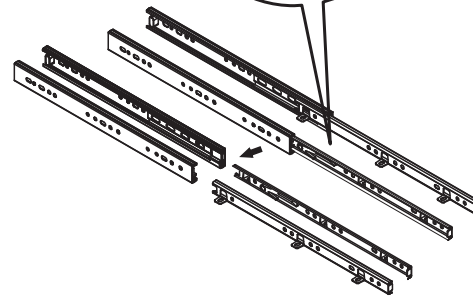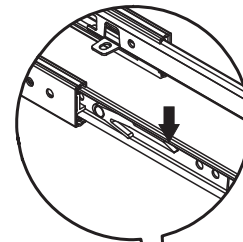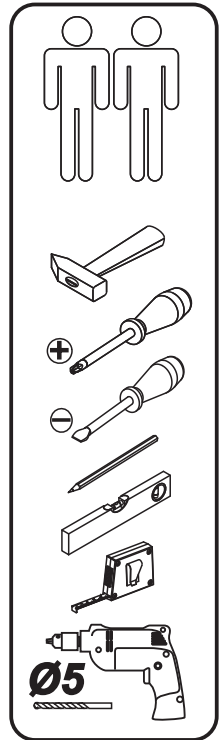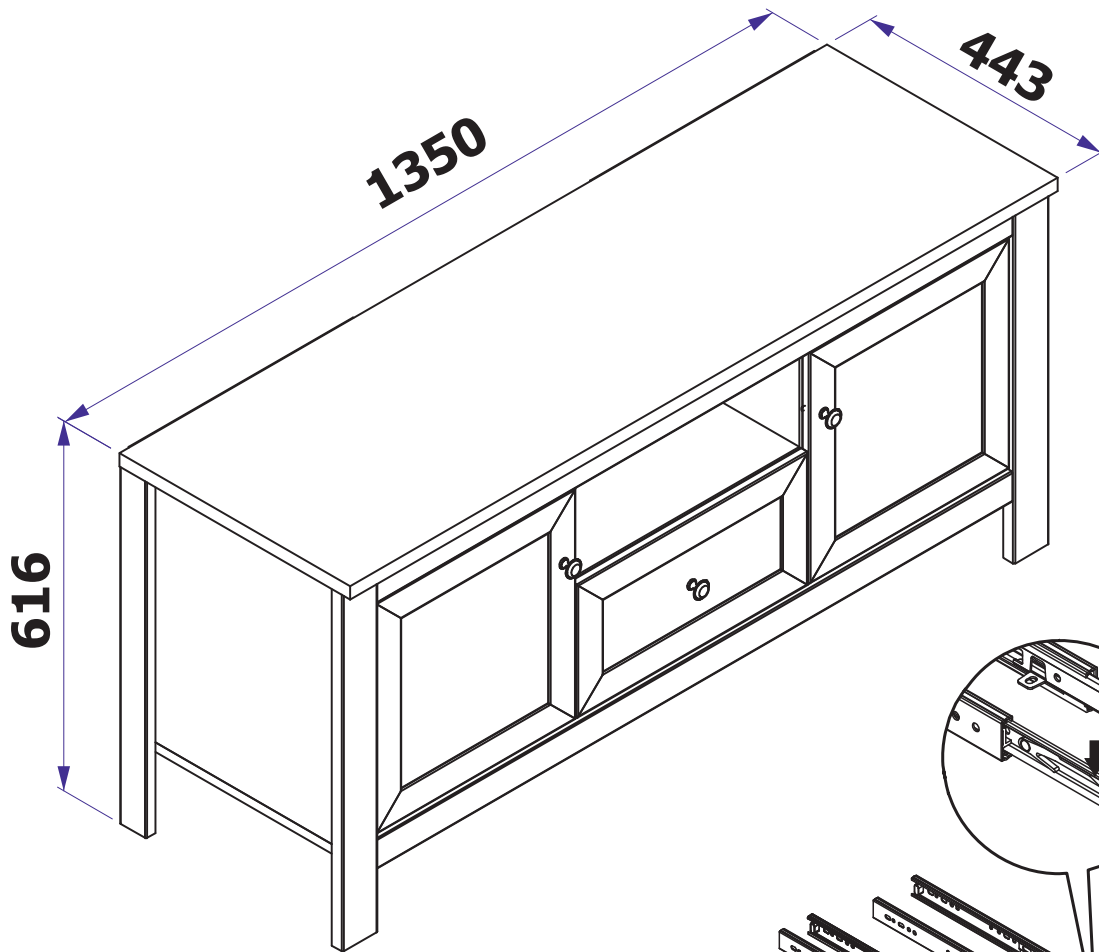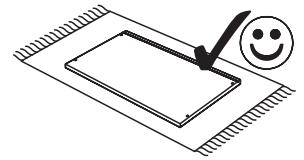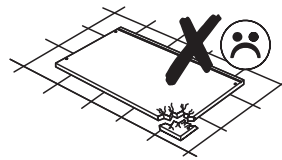








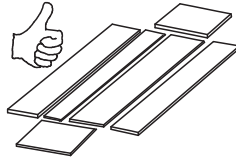

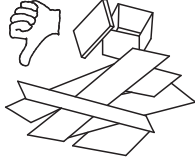







ГЕРМЕС СБ-3092 / GERMES SB-3092




301 1,6x25  x40	218 3x18  x6	202 Ø4x13  x24	209 Ø4x25  x4	217 Ø4x30  x6	203 Ø4x35  x 4	443  x4	122 M4x30  x1	461  x14
561-1  x12	451  x1	737-1  x4	737-2  x4	470  x5	405  x8	402-1  x3	402-2 M4x20  x3	735  x6
406 Ø7x50  x14	 x1	561-2 Ø15x12  x12	561-3 Ø7x45  x12	538  x2	410 Ø8x30  x42			





ГЕРМЕС СБ-3092 / GERMES SB-3092


№	L	B	S	Q	
1	440	404	16	1	1/3
2	440	404	16	1	1/3
3	440	404	16	1	1/3
4	440	404	16	1	1/3
5	436	404	16	1	1/3
6	134	115	16	1	1/3
7	382	382	15	2	3/3
8	1350	440	22	1	1/3
9	1312	404	16	1	1/3
10	406	384	16	2	1/3
11	590	67	21	1	2/3
12	590	67	21	1	2/3
13	590	50	17	2	2/3
14	1214	50	17	2	2/3
15	220	440	15	1	3/3
16	382	115	16	1	1/3
17	382	115	16	1	1/3
18	400	115	16	2	1/3
19	412	400	3	1	1/3
20	474	428	3	2	1/3
21	240	452	3	1	1/3

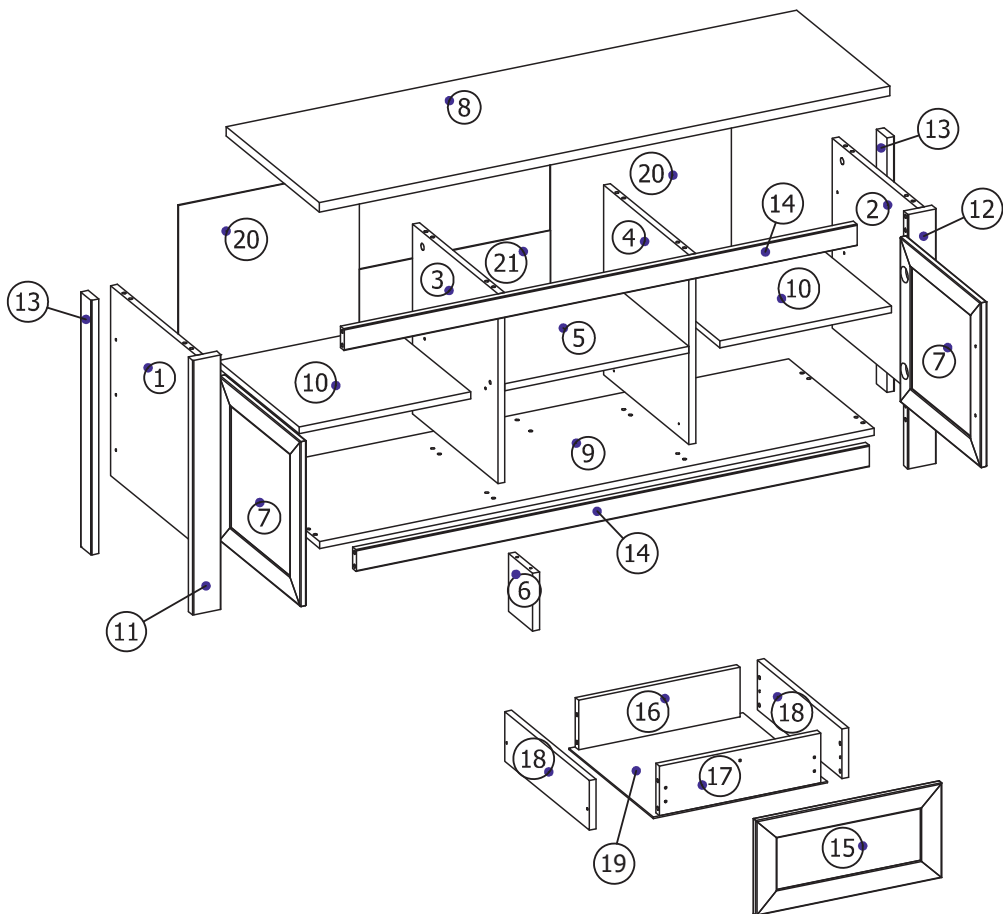


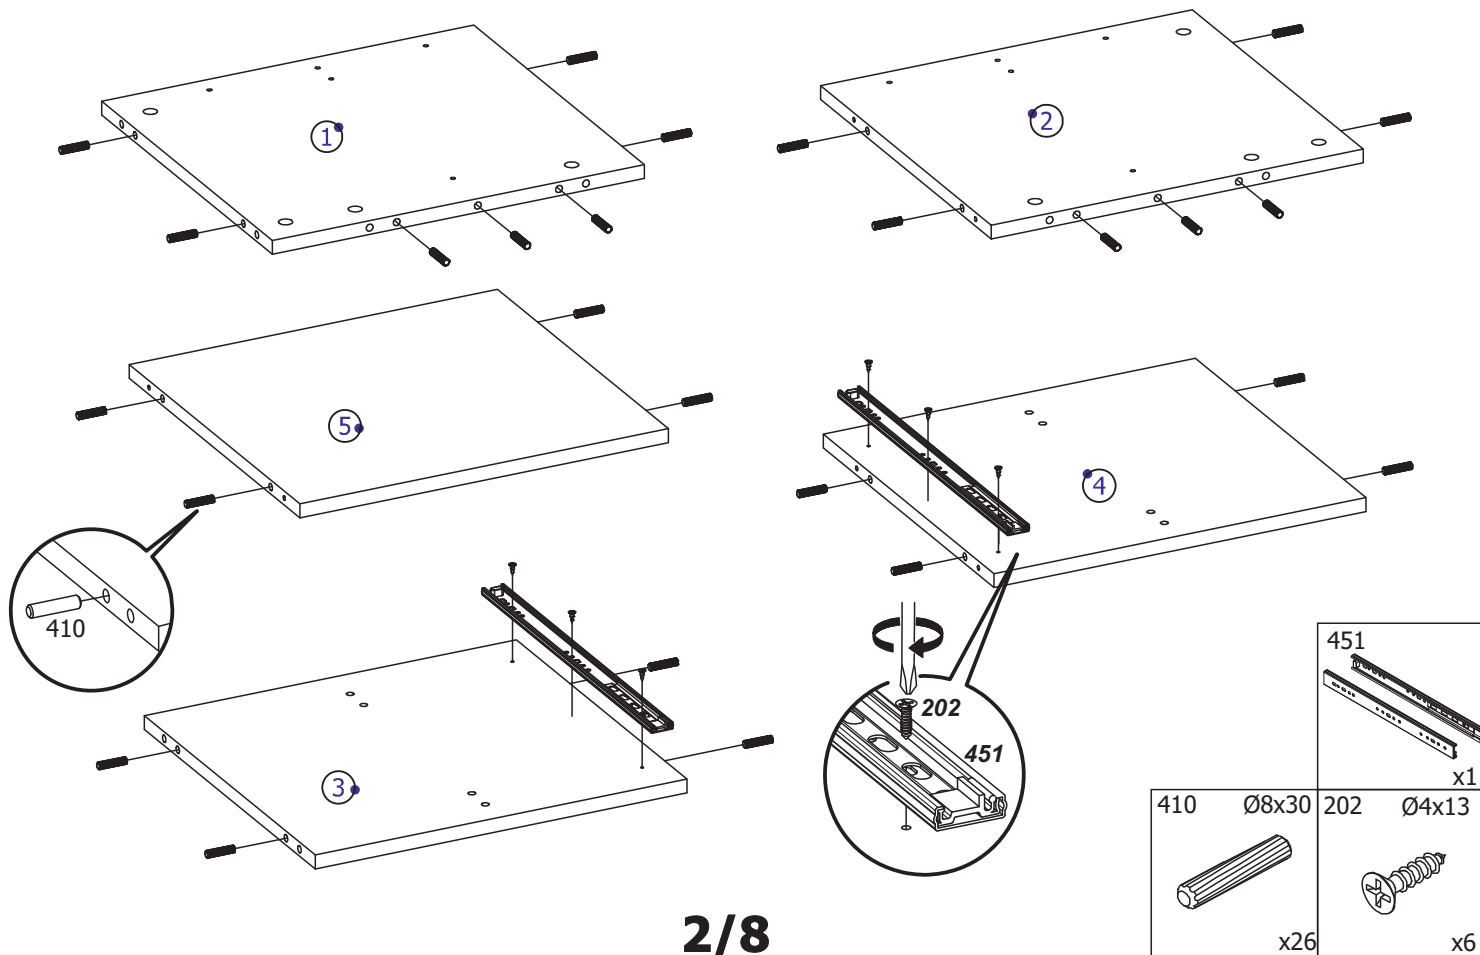

1

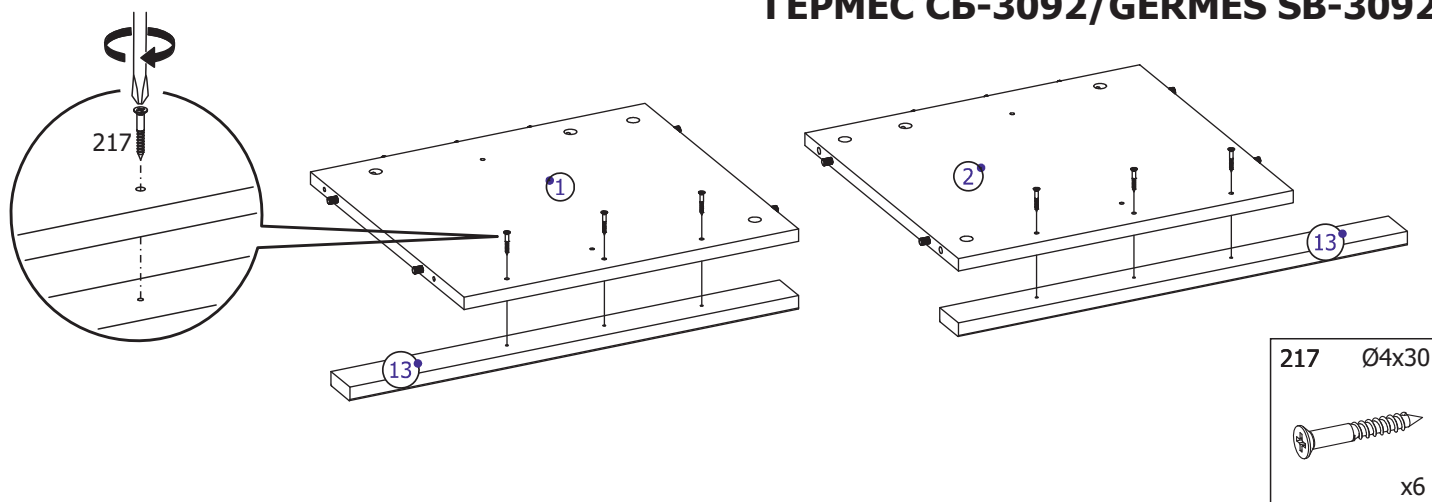


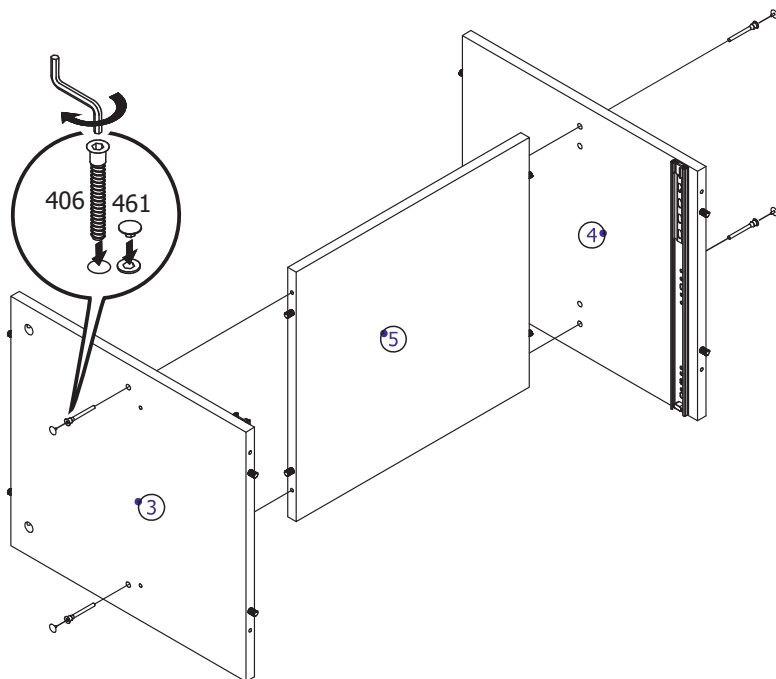

2**ГЕРМЕС СБ-3092/GERMES SB-3092**

217	Ø4x30
	
x6	




3

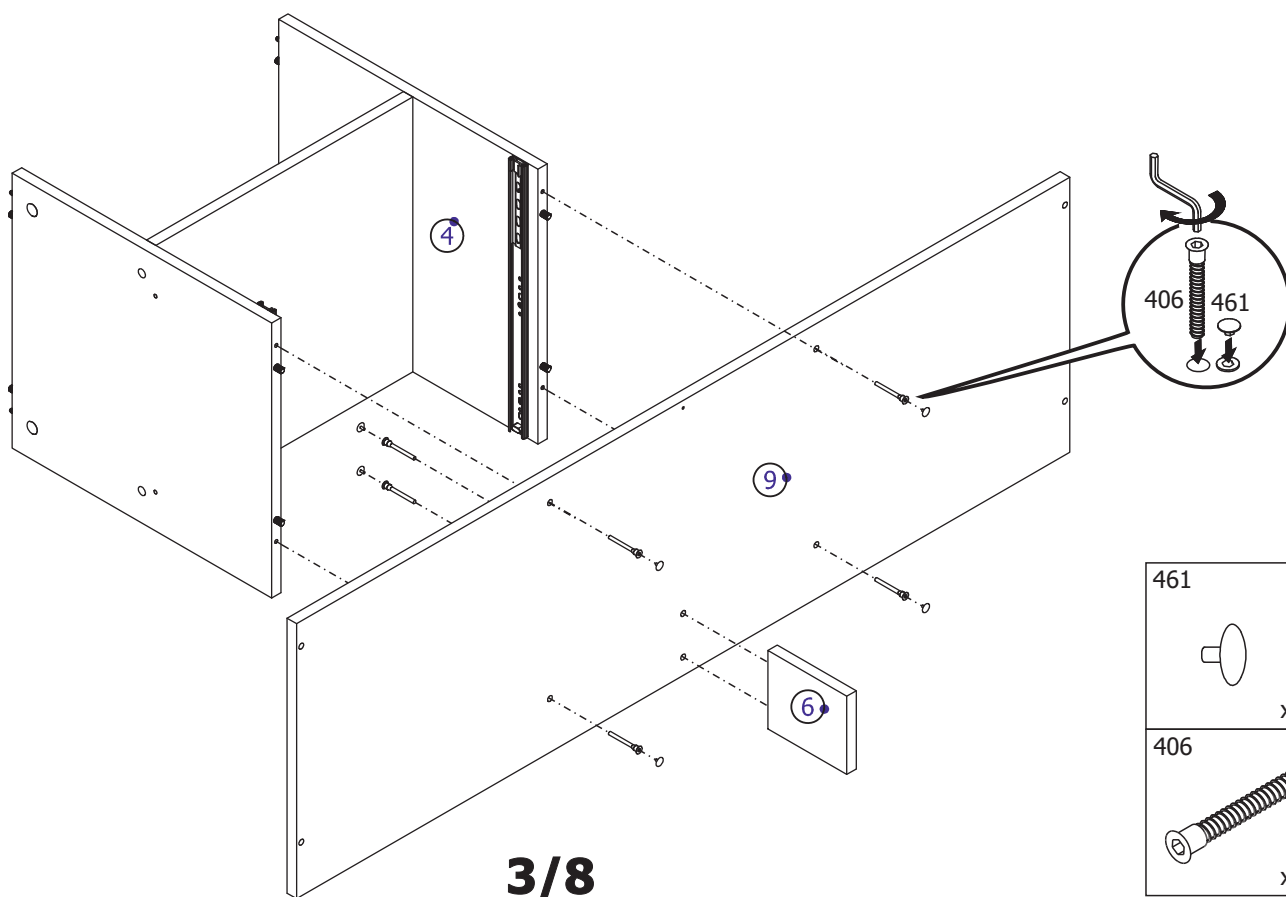461		x4
406		x4


4

461		x6
406		x6


3/8

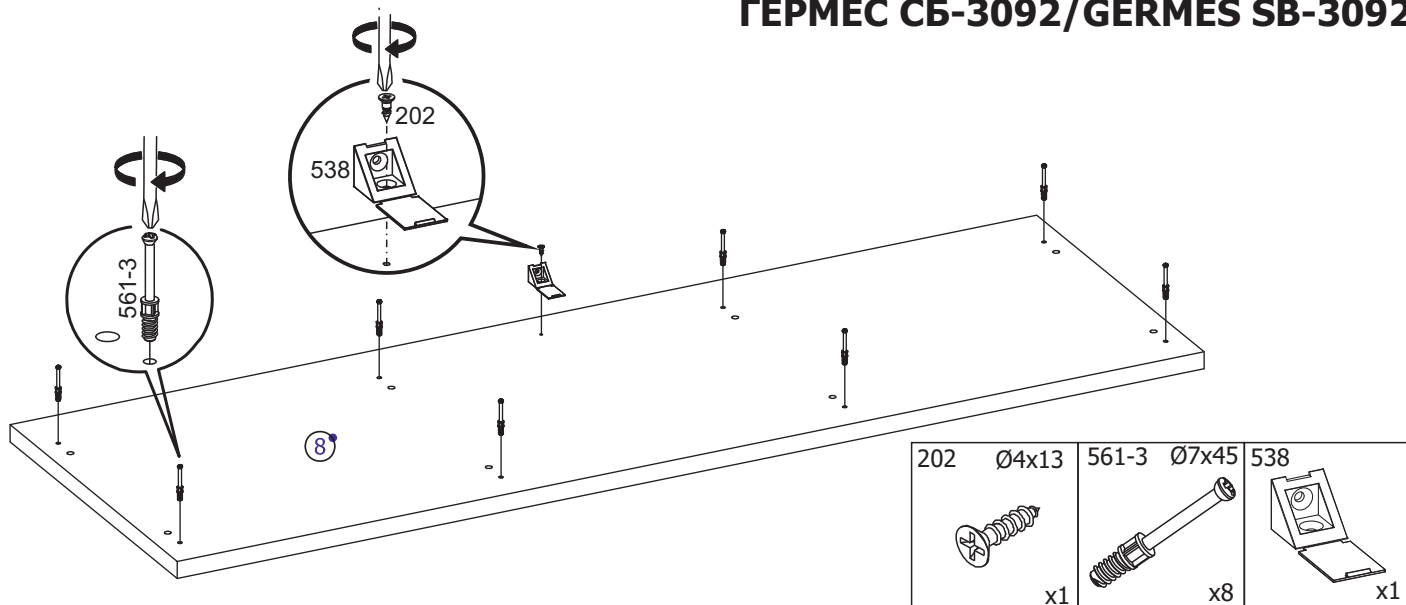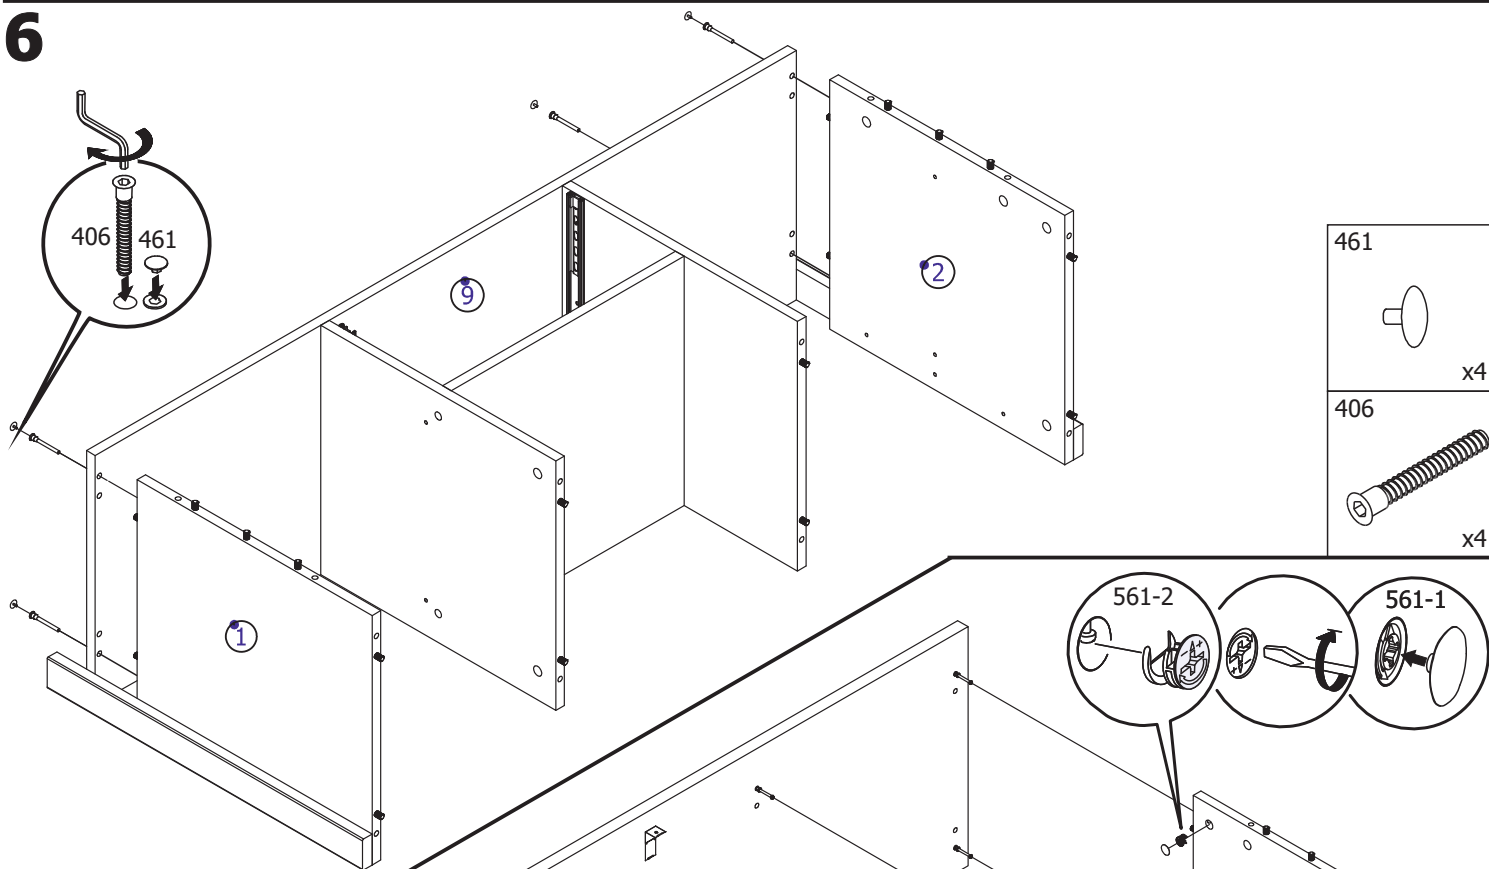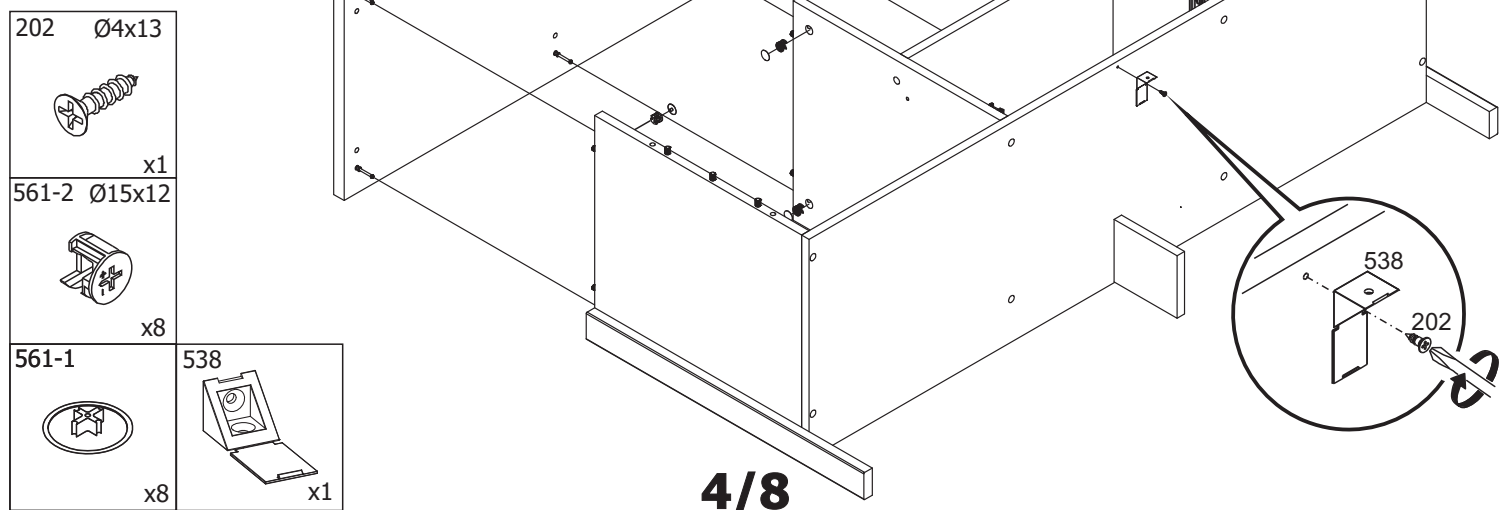5**ГЕРМЕС СБ-3092 / GERMES SB-3092****6****7****4/8**


8

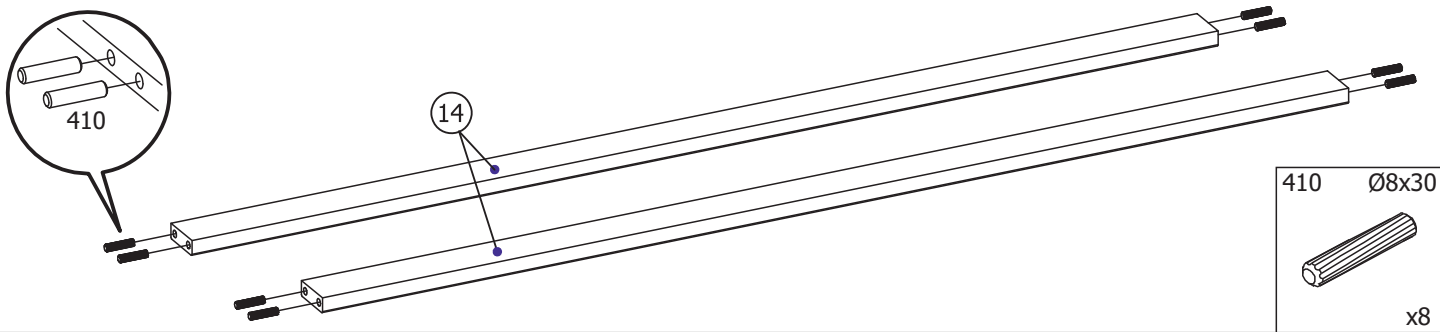

9

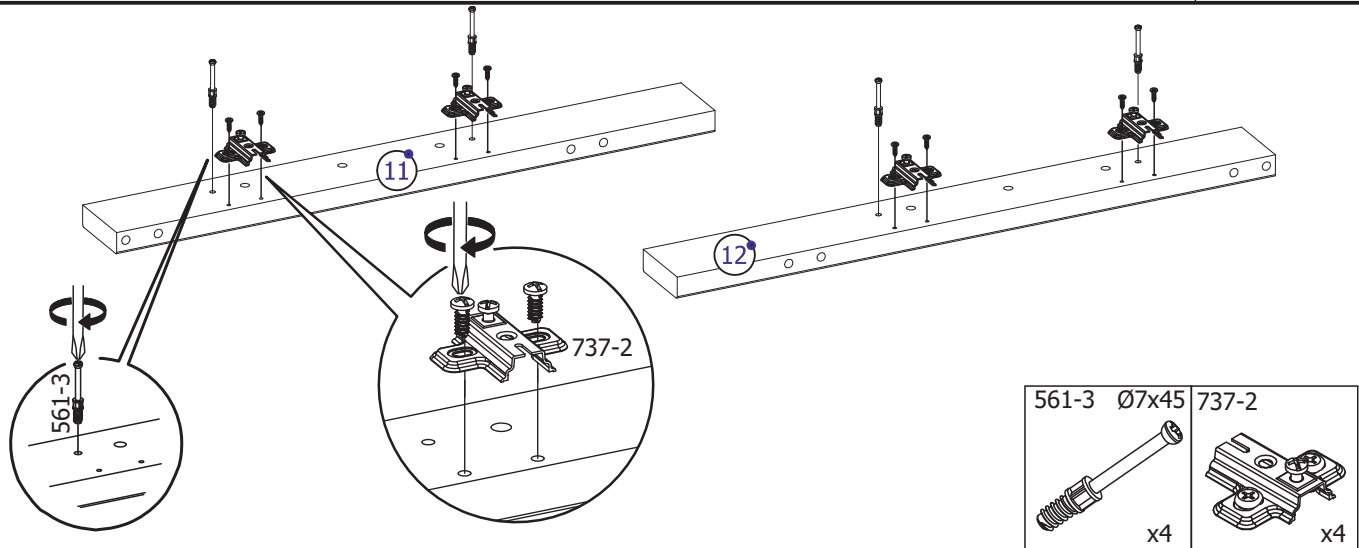


10

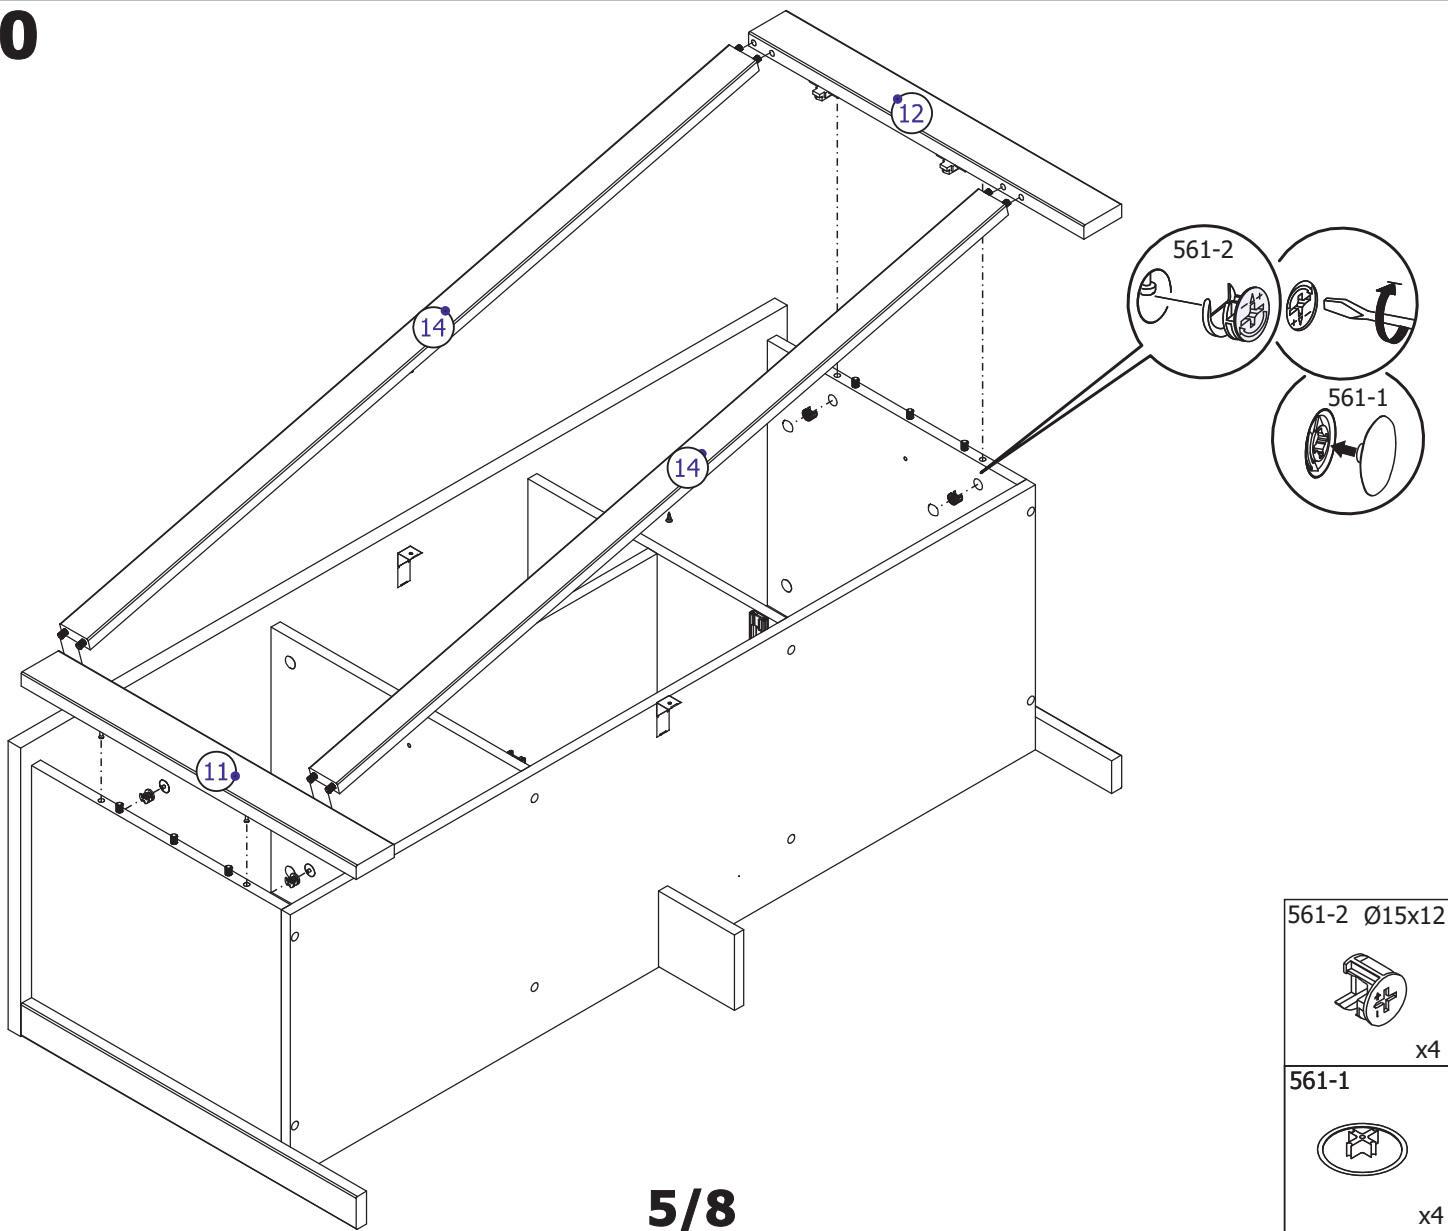

11

ГЕРМЕК СБ-3092 / GERMES SB-3092

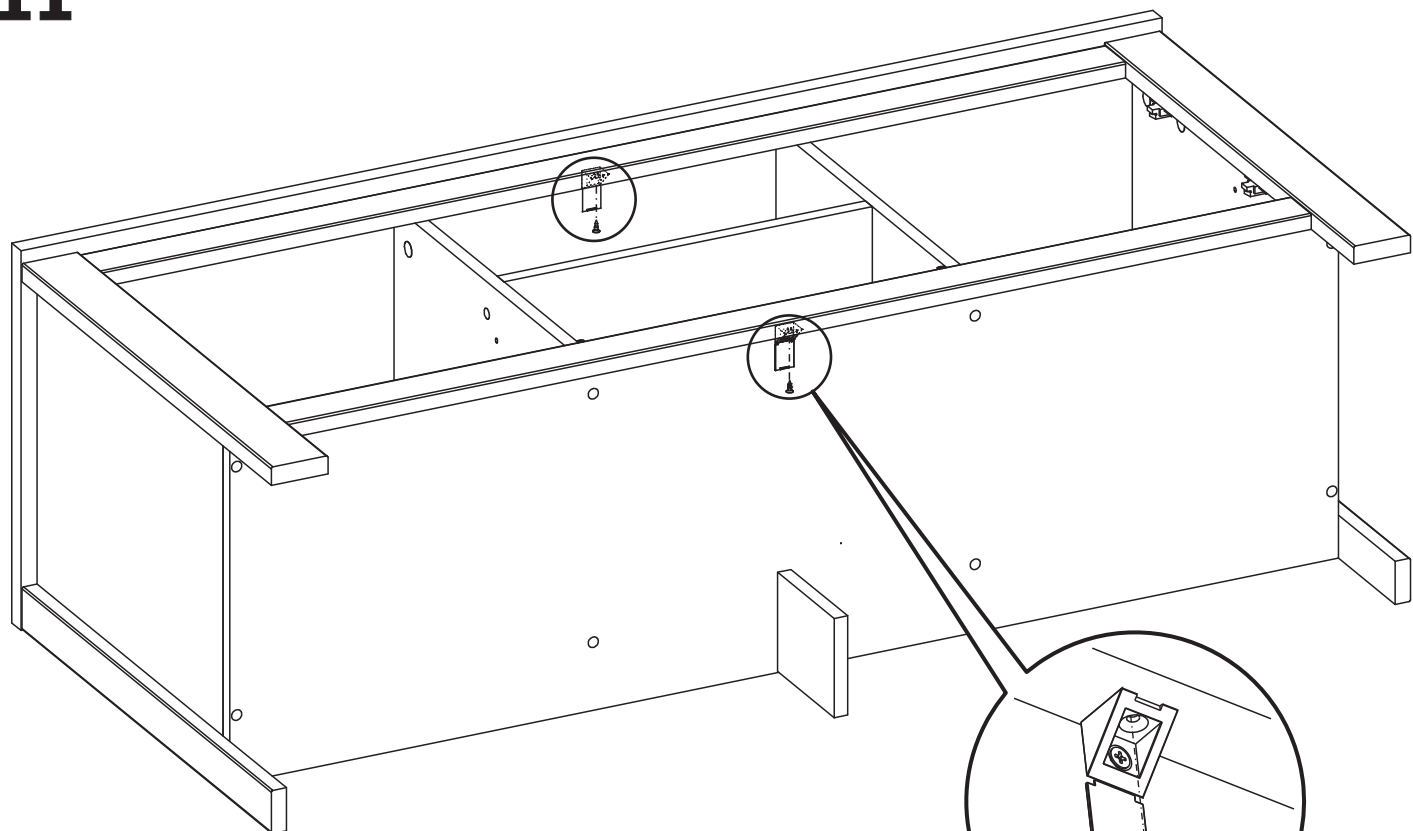


202 Ø4x13



x2

12

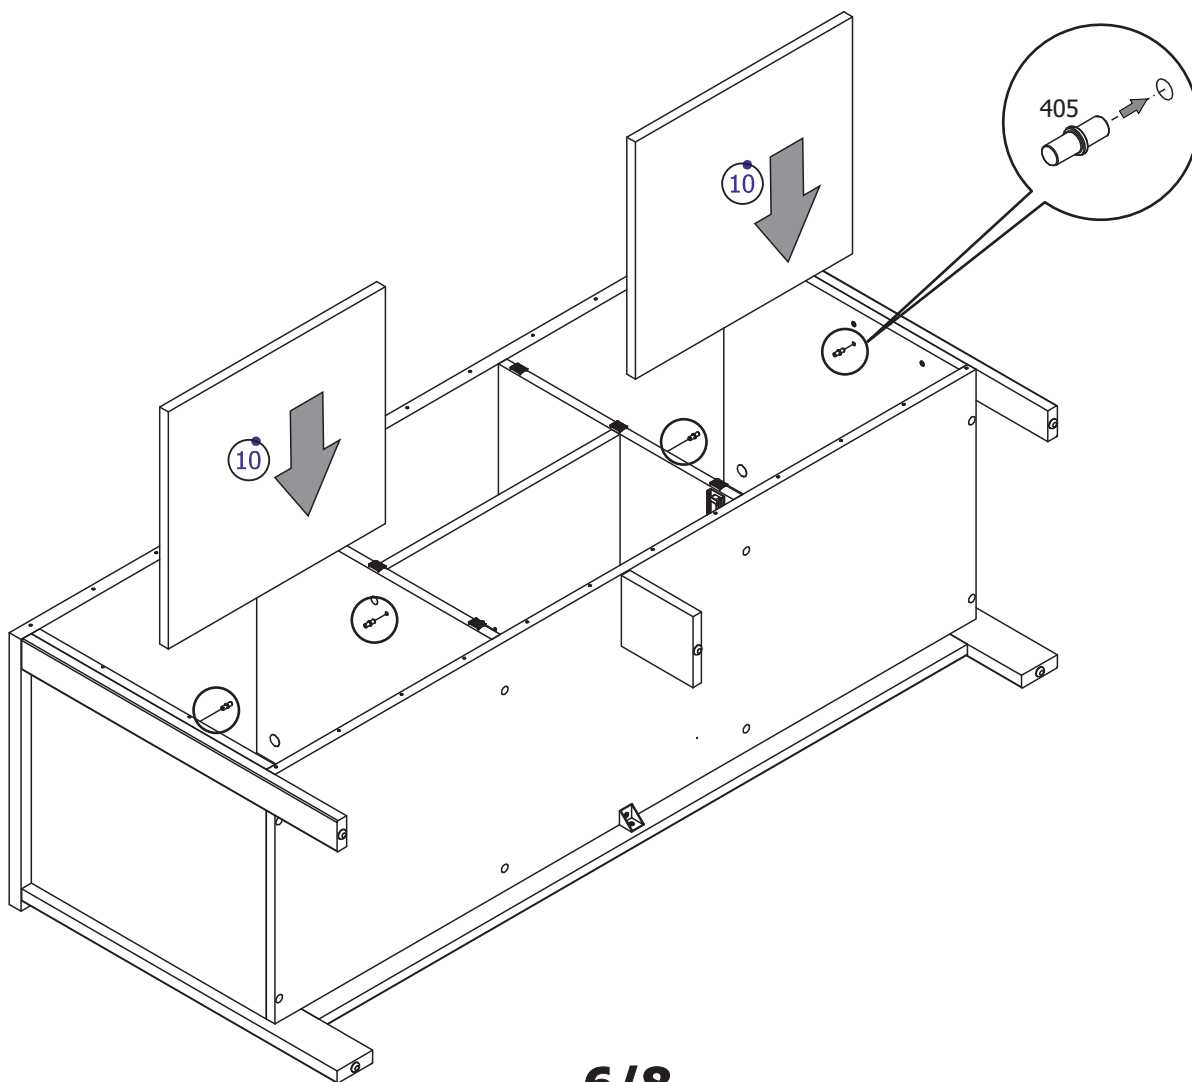

405








x8

6/8


13



ГЕРМЕС СБ-3092 / GERMES SB-3092

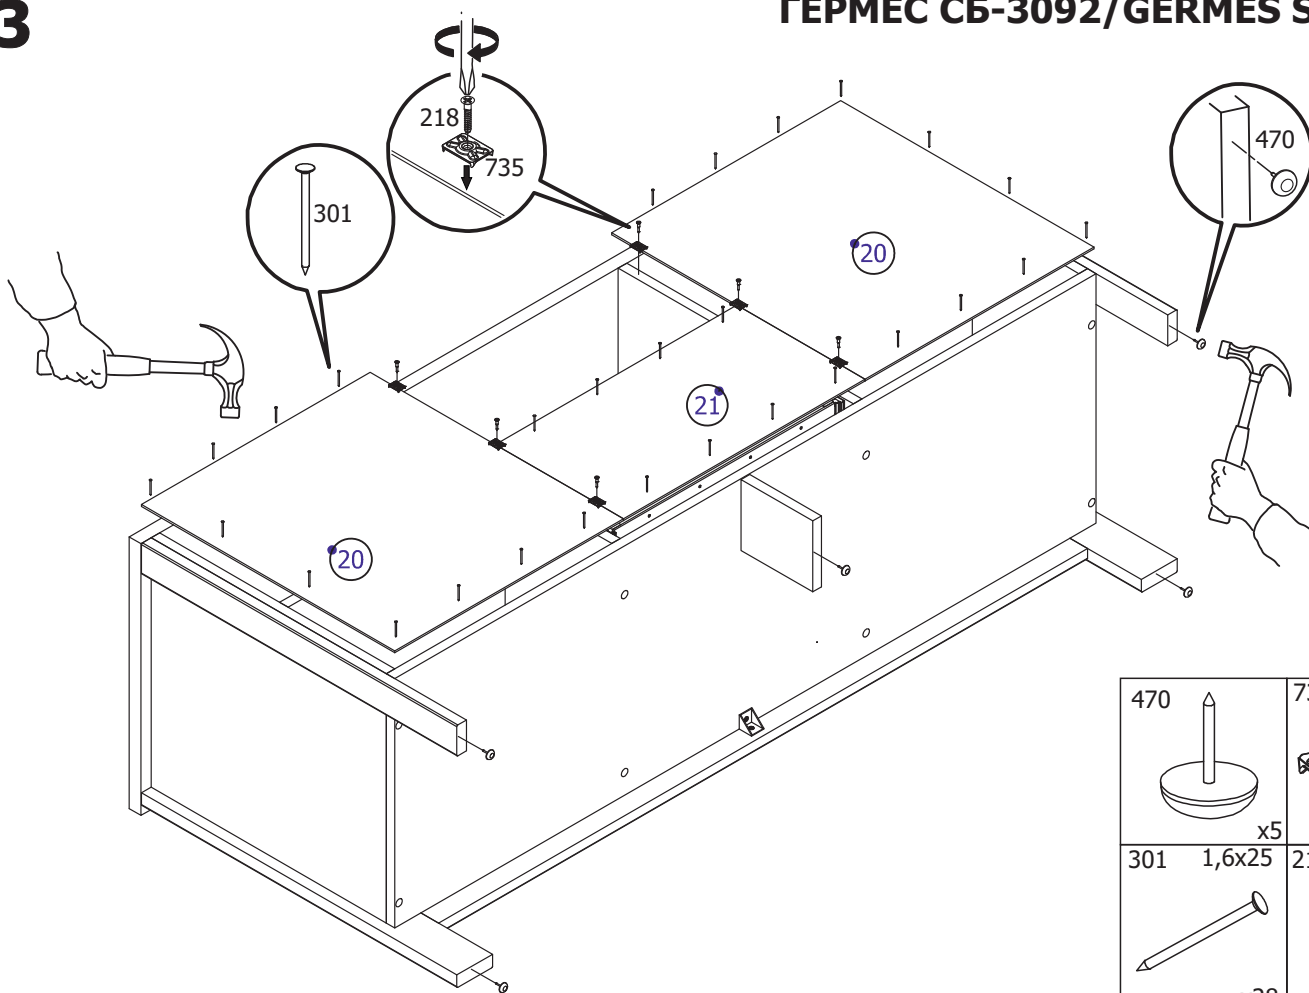


470		735	
	x5		x6
301	1,6x25	218	3x18
			
	x28		x6



14

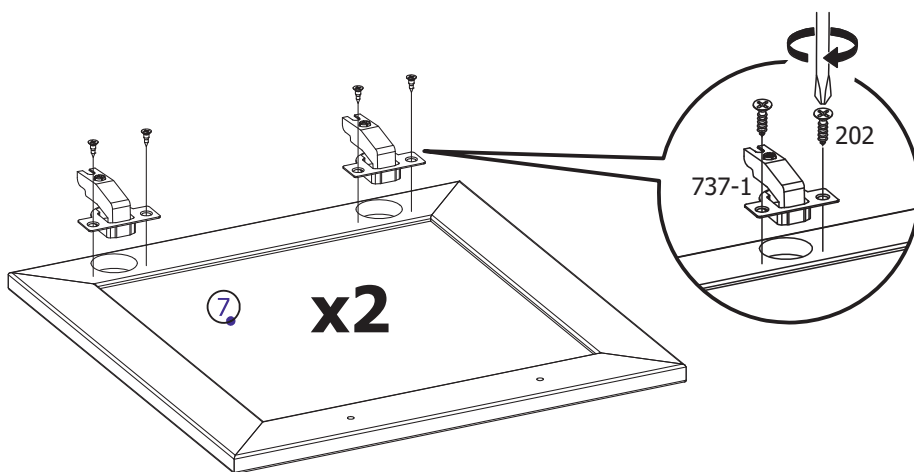

202	Ø4x13
	
	x8
737-1	
	
	x4

15

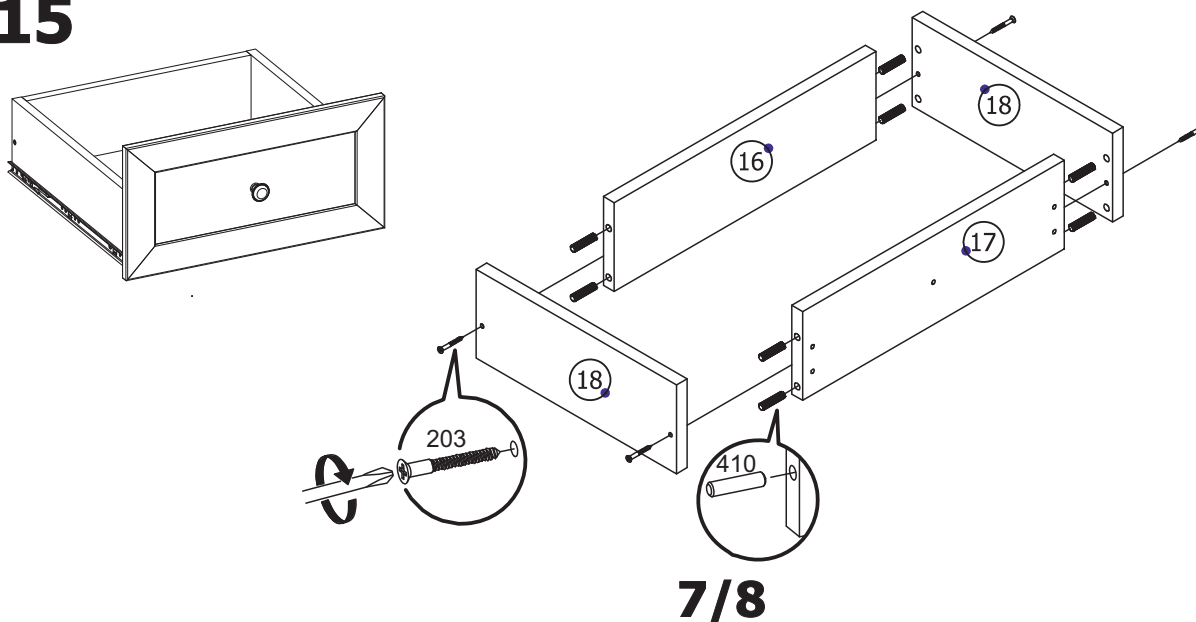

203	Ø4x35
	
	x 4
410	Ø8x30
	
	x8

7/8

16

ГЕРМЕК СБ-3092 / GERMES SB-3092

209	Ø4x25
	x4
301	1,6x25
	x12
202	Ø4x13
	x6
122	M4x30
	x1
402-1	451
	x1
	x1

Tools: Hammer, Drill (Ø5)

Assembly steps: 1. Attach side panels (19) to the drawer front (17) using nails (301). 2. Attach the bottom panel (16) to the side panels (19) using screws (202). 3. Attach the back panel (18) to the side panels (19) using screws (209). 4. Attach the drawer front (17) to the side panels (19) using screws (209). 5. Attach the drawer front (17) to the bottom panel (16) using screws (122). 6. Attach the knob (402-1) to the drawer front (17) using screws (209). 7. Attach the slide (451) to the drawer front (17) using screws (209).

17

443		x4
402-1		x2
402-2	M4x20	x2

Tools: Drill (Ø5)

Assembly steps: 1. Install the knob (443) on the cabinet side panel. 2. Install the knob (402-1) on the cabinet side panel using screws (402-2). 3. Install the knob (402-1) on the cabinet side panel using screws (402-2).